


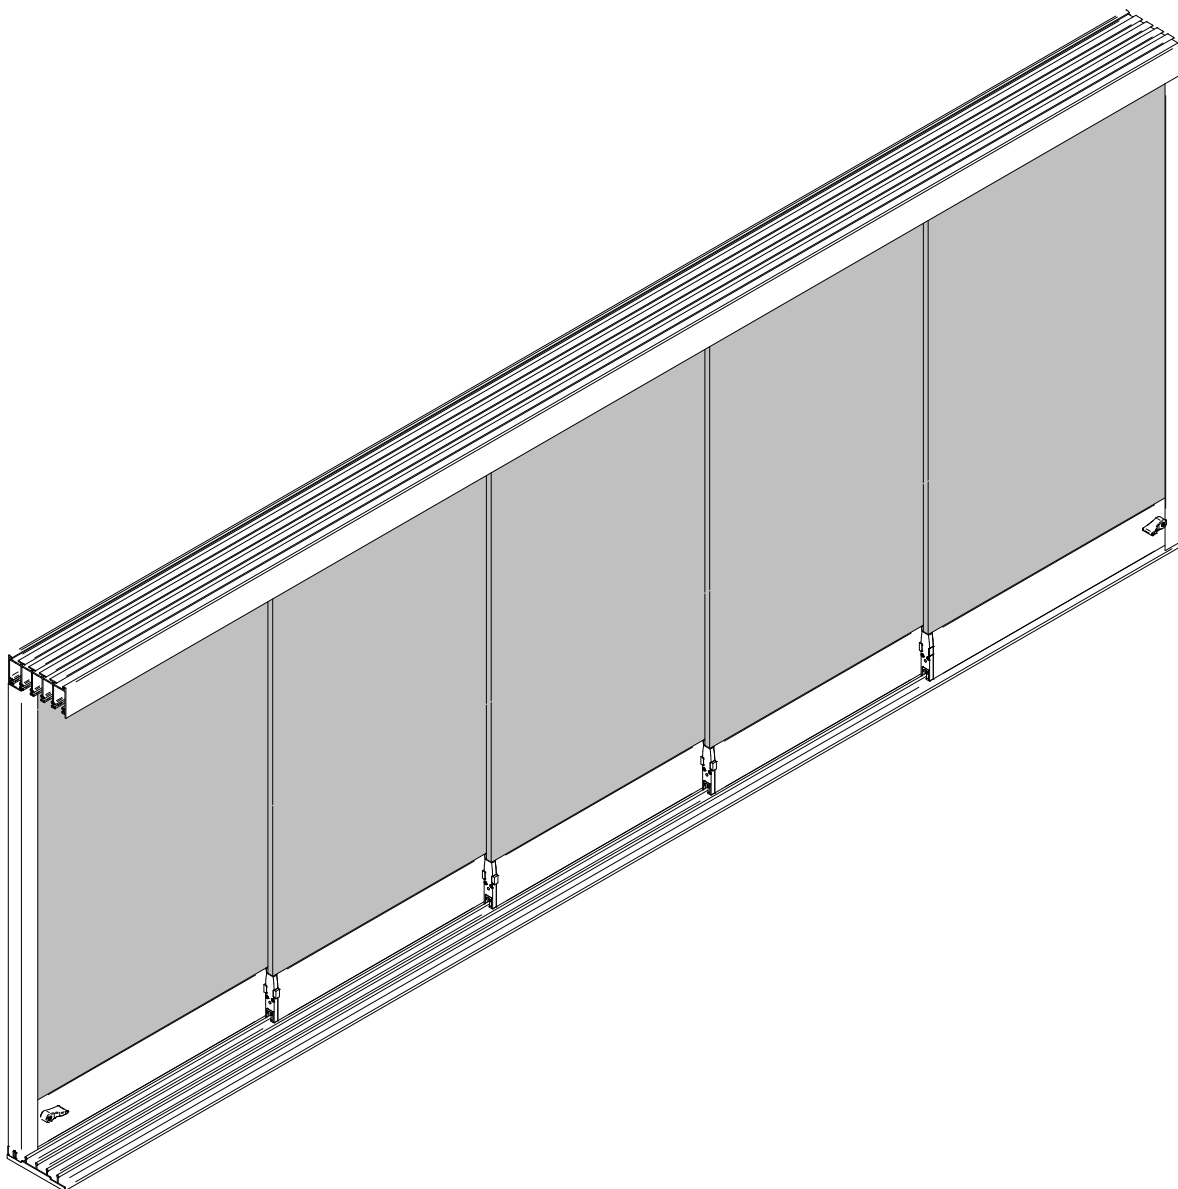

ISTRUZIONI DI MONTAGGIO
INSTRUCCIONES DE MONTAJE
ASSEMBLY INSTRUCTIONS



Max 130 kg



Max 1300



Max 3000



**2 - 3 - 4 - 5 - 6
6 - 8 - 10 - 12**



10 - 55.1 mm



12 mm




± 4 mm




UNI EN 1932:2013 classe 6



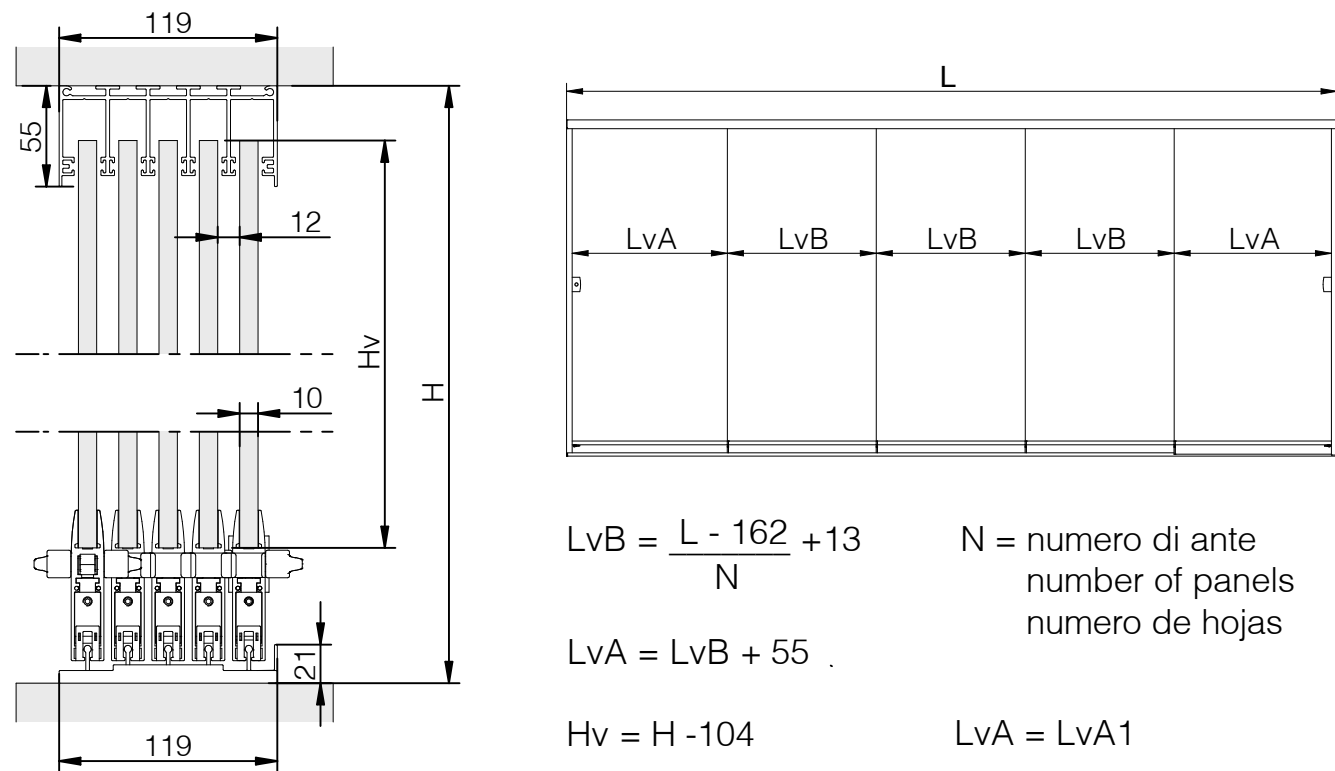


2 3 4 5 6


Profilo superiore
Top profile
Perfil superior

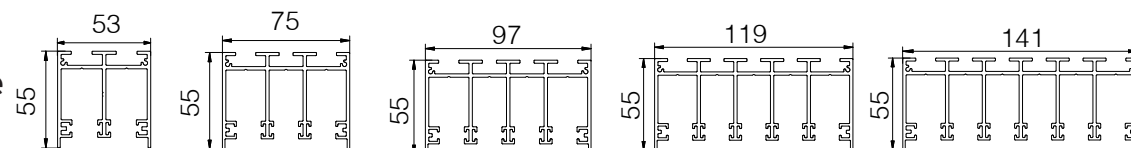


In appoggio
On the floor
Vista




Incassata
Into the floor
Encastrada




Becco d'oca
Goose beak
Pico de oca

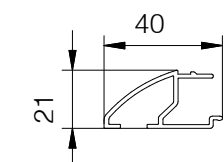



Pro filo pinza
Clamp profile
Perfil pinza



Profilo laterale
Lateral profile
Perfil lateral

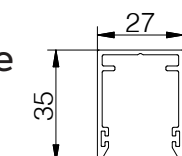

Attrezzi richiesti / Required tool / Herramientas necesarias

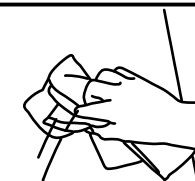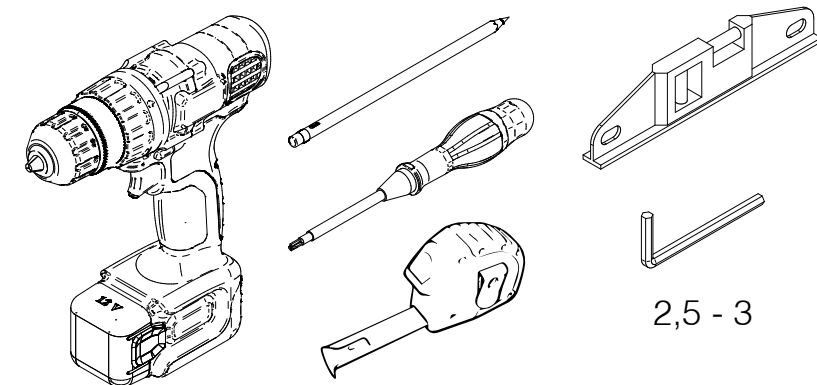


Pulire il vetro ed i profili prima dell'installazione.

Clean the glass and profile before installing.

Limpiar el cristal y los perfiles antes de la instalación.

Componenti - Components - Componentes

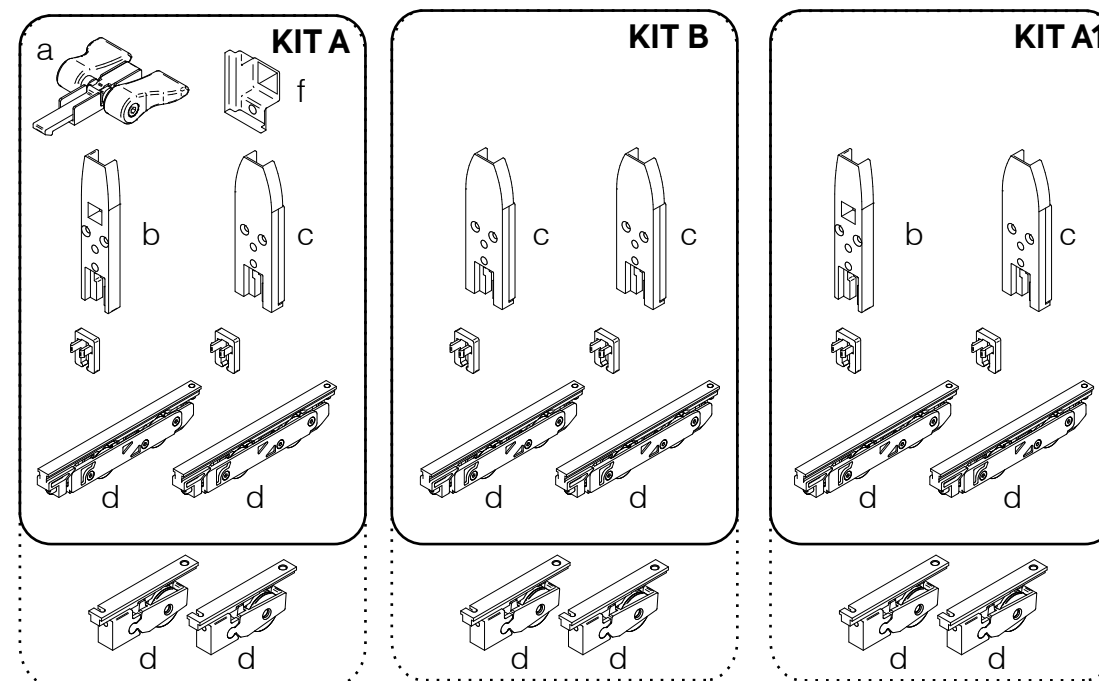

Extra
p. 4-6

Basic
P. 7-9

Complementi - Complements - Complementos

Maniglie ad incollare - Handle self adhesive - Tirador con adhesivo

Argento/Silver/Plata
Bianco/White/Blanco
Nero/Black/Negro
Acciaio/Stainless s/Acero


000006678
000006678BI
000006678BL

000006681
000006681BI
000006681BL

MANROUND
MANROUNDAX

Serrature - Door lock - Serradura

Su montante laterale argento/For vertical beam silver/Para cerrar por piezas laterales plata
Per ante contrapposte argento/For double doors silver/Por hojas opuestas plata



SLD6692AG
000006692AG

SLD6694AG
000006694AG




000006693AG



000006695AG

Contropiastra argento/Counterplate silver/Controplaca plata


1 Assemblaggio pinza anta "A" - Assembly clamps "A" panel - Montaje pinza en hoja "A"

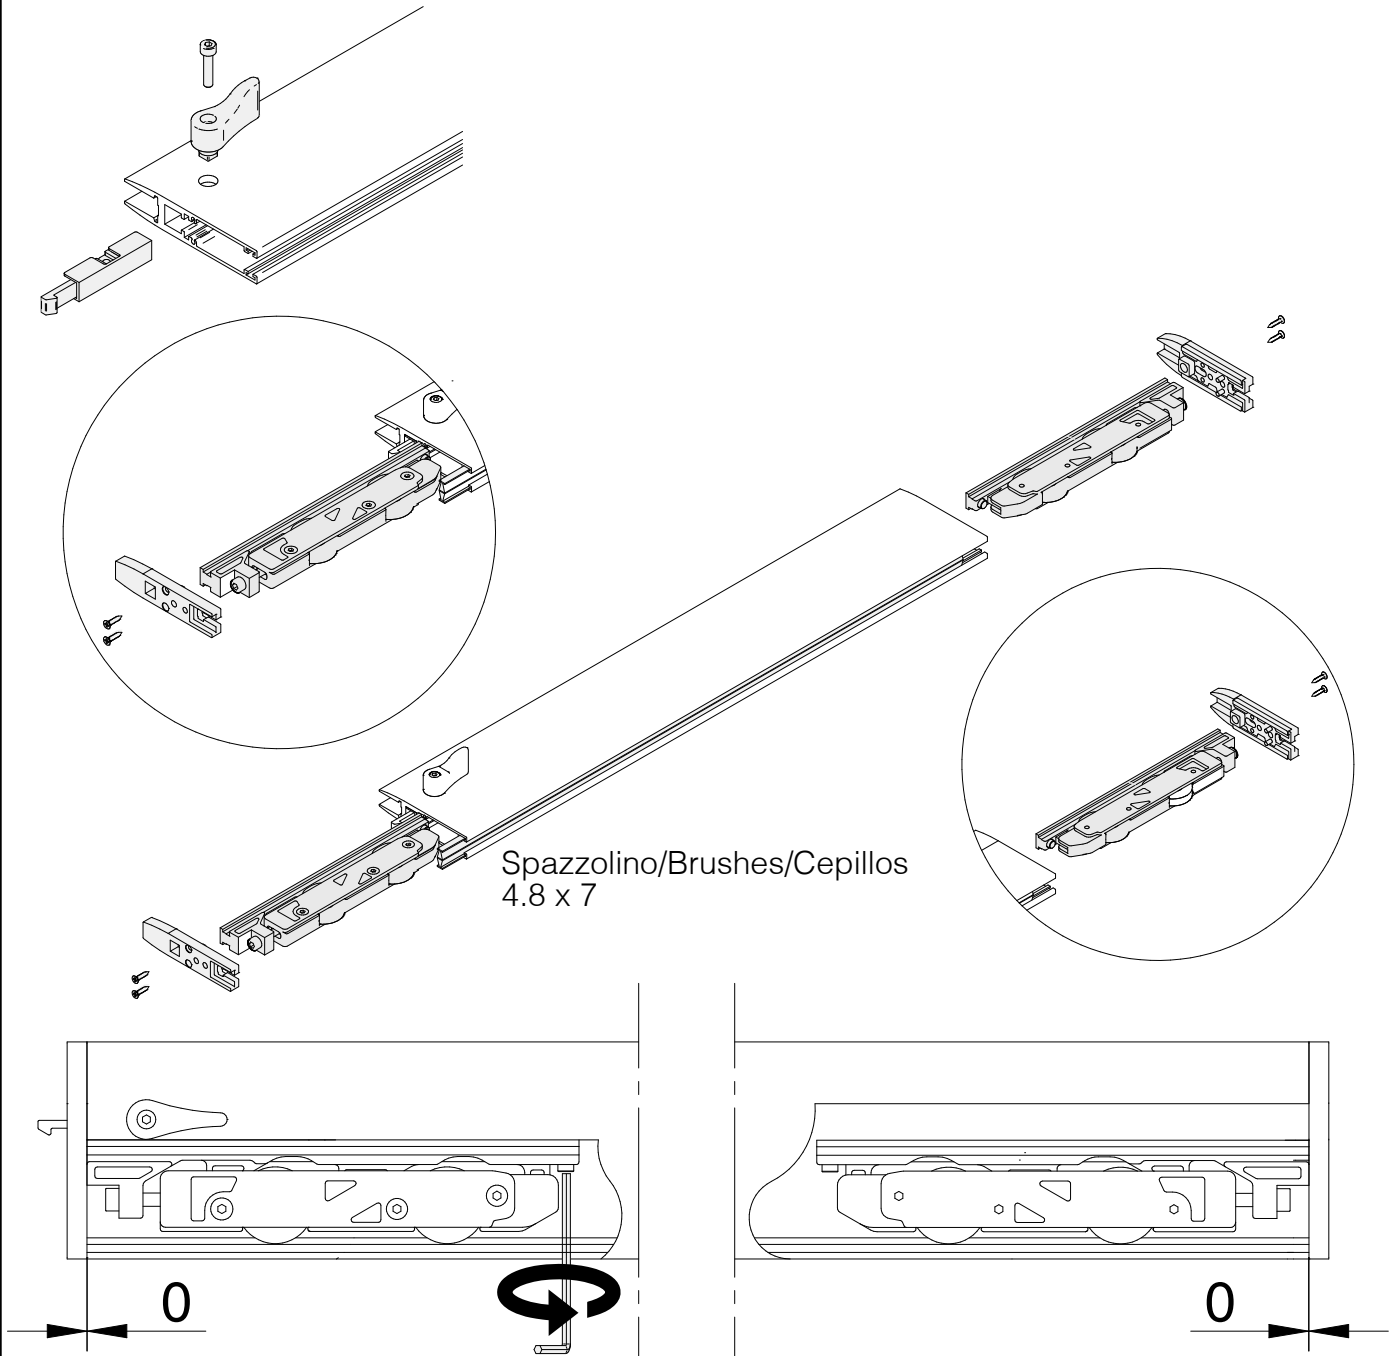

2 Fissaggio pinza anta "A" - Match clamps "A" panel - Fijación pinza en hoja "A"




3 Assemblaggio pinza anta "B" - Assembly clamps "B" panel - Montaje pinza en hoja "B"

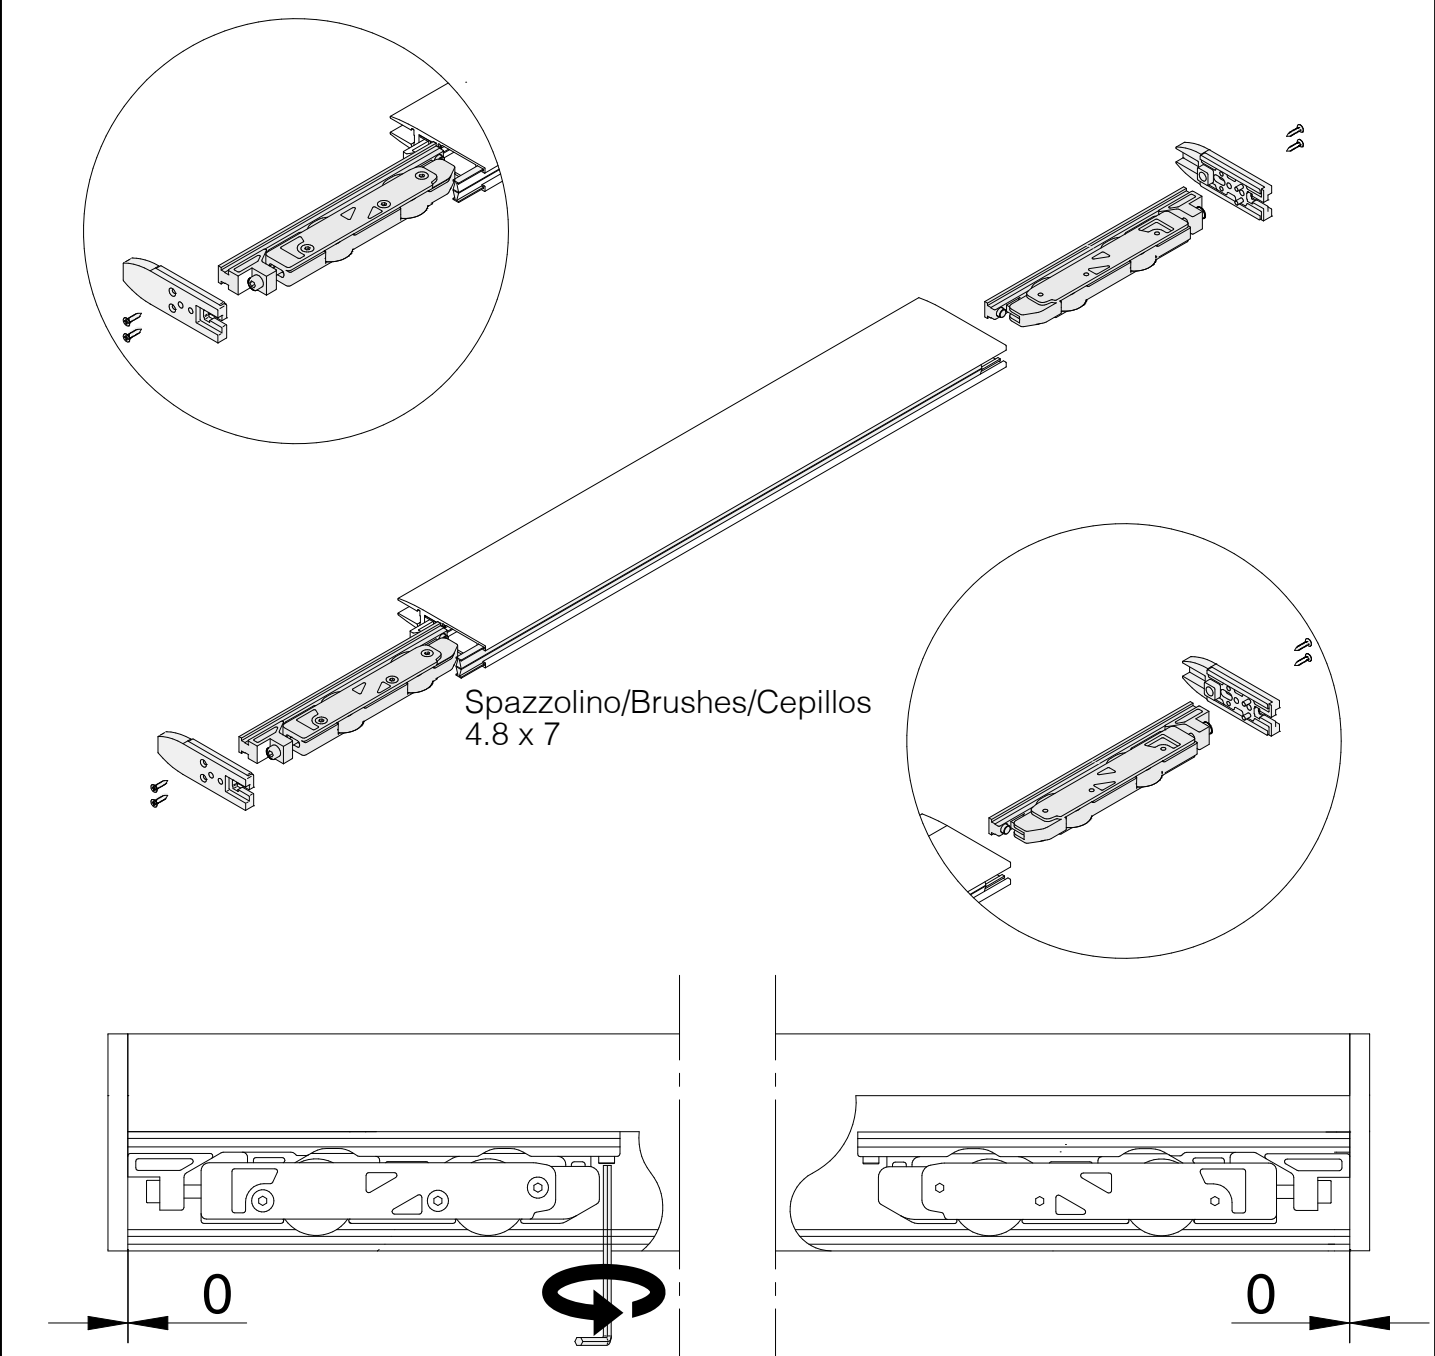

4 Fissaggio pinza anta "B" - Match clamps "B" panel - Fijación pinza en hoja "B"




3a Assemblaggio pinza anta "A1" contrapposta
Assembly clamps "A1" panel opposite
Montaje pinza en hoja "A1" opuesta

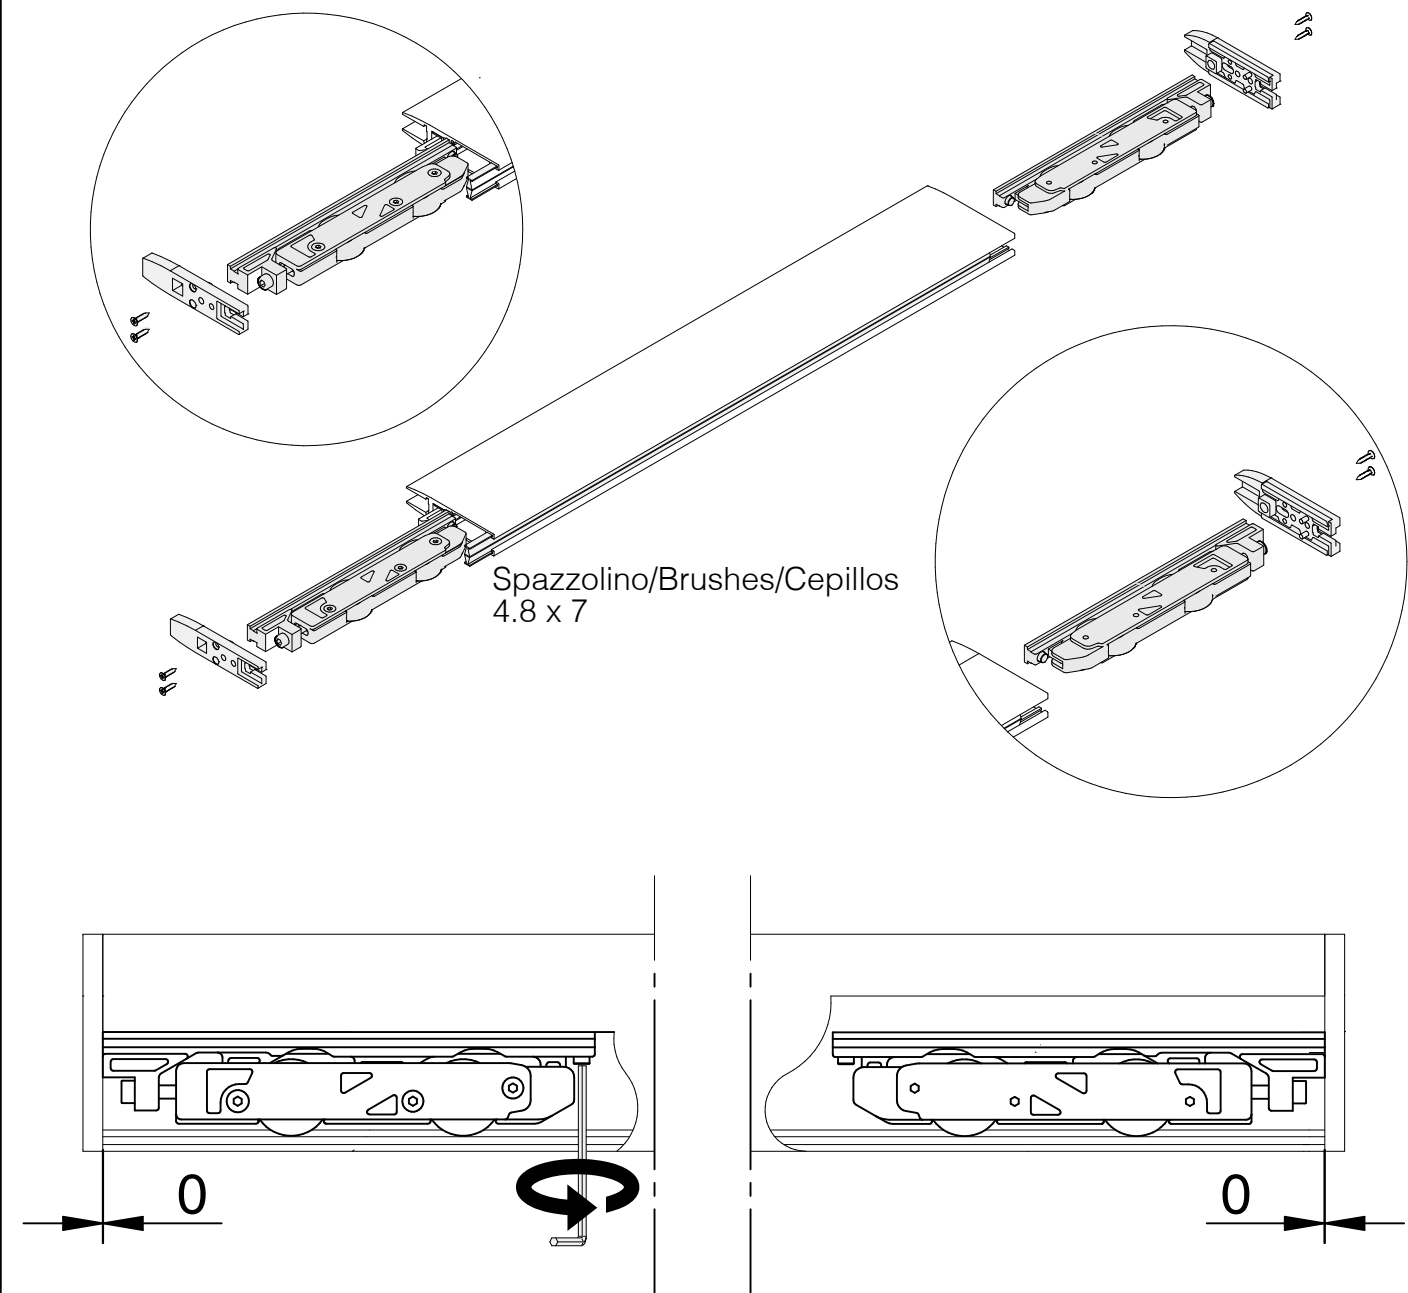

4a Fissaggio pinza anta "A1" - Match clamps "A1" panel - Fijación pinza en hoja "A1"




1 Assemblaggio pinza anta "A" - Assembly clamps "A" panel - Montaje pinza en hoja "A"

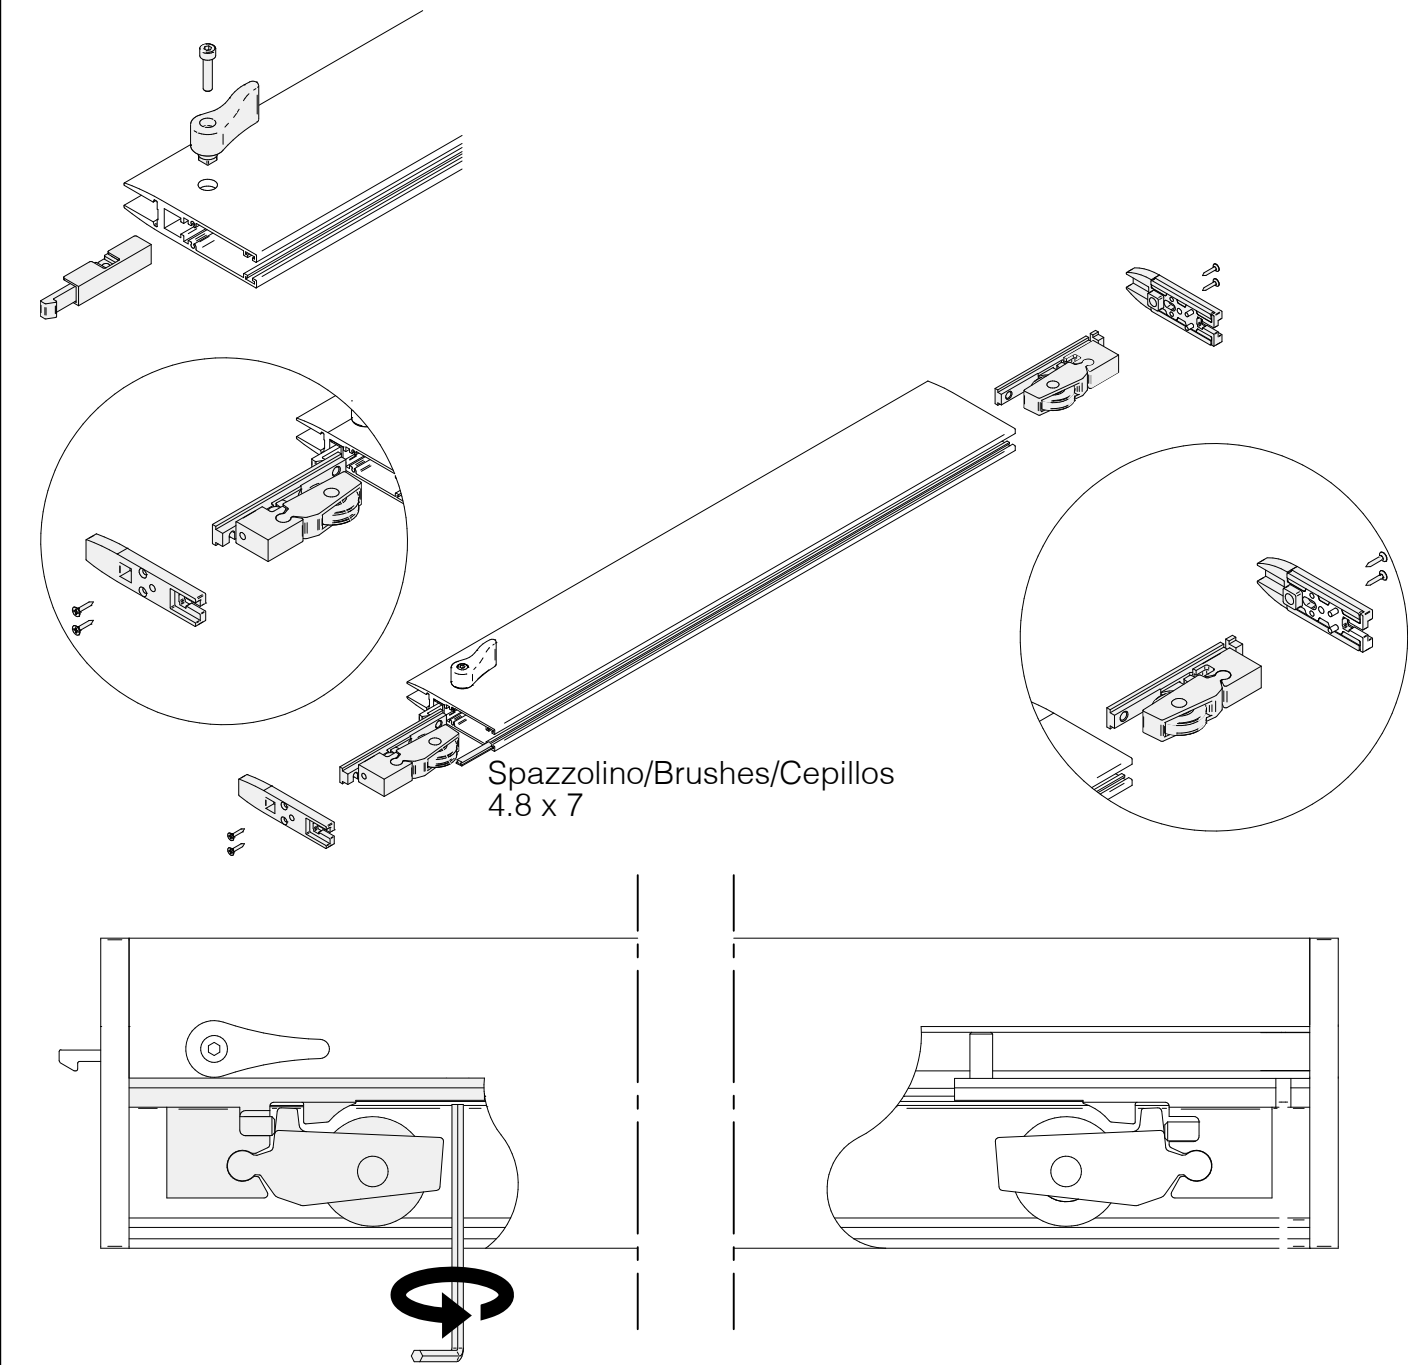


2 Fissaggio pinza anta "A" - Match clamps "A" panel - Fijación pinza en hoja "A"




3 Assemblaggio pinza anta “B” - Assembly clamps “B” panel - Montaje pinza en hoja “B”

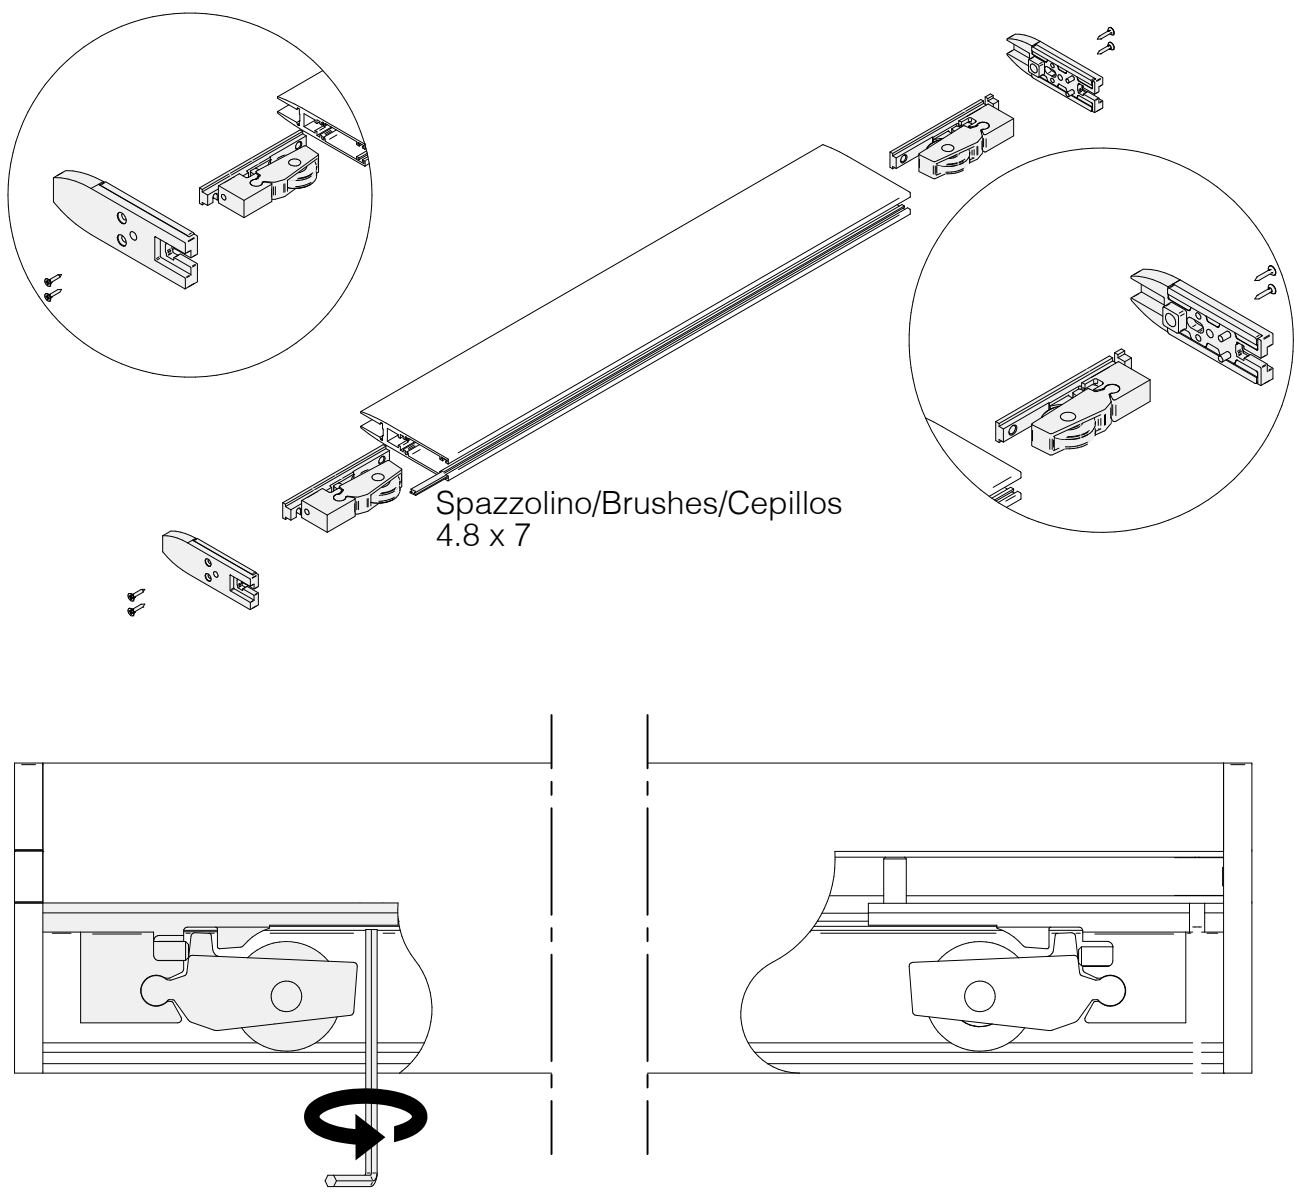

4 Fissaggio pinza anta “B” - Match clamps “B” panel - Fijación pinza en hoja “B”

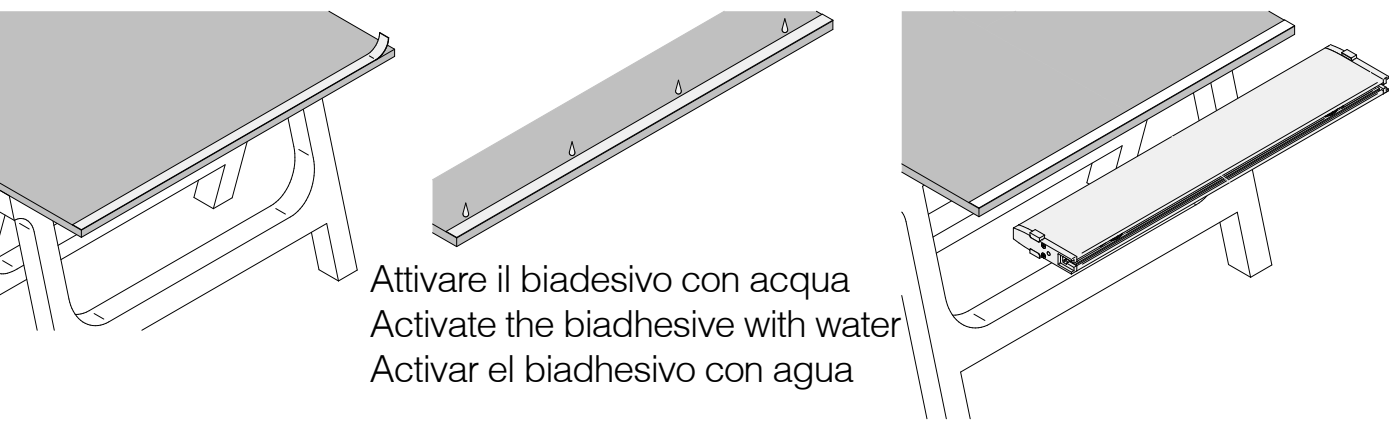


3a Assemblaggio pinza anta “A1” contrapposta
Assembly clamps “A1” panel opposite
Montaje pinza en hoja “A1” opuesta

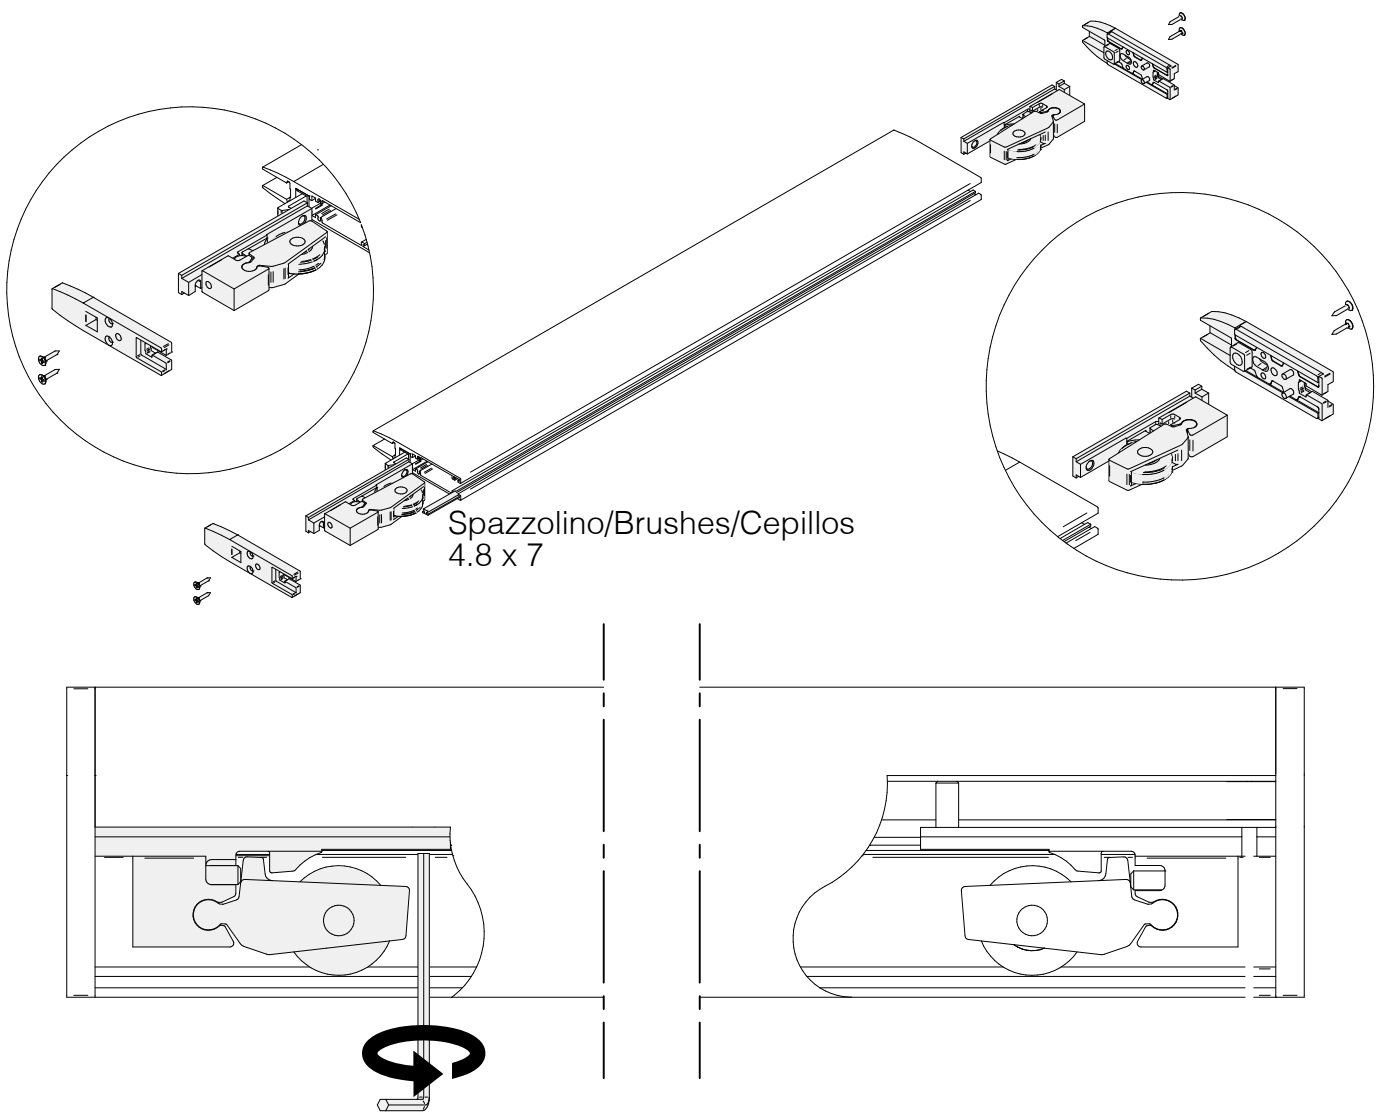


4a Fissaggio pinza anta “A1” - Match clamps “A1” panel - Fijación pinza en hoja “A1”





5a Installazione vaschette laterali - installation water drain trays Instalaciòn de bandejas de drenaje de agua

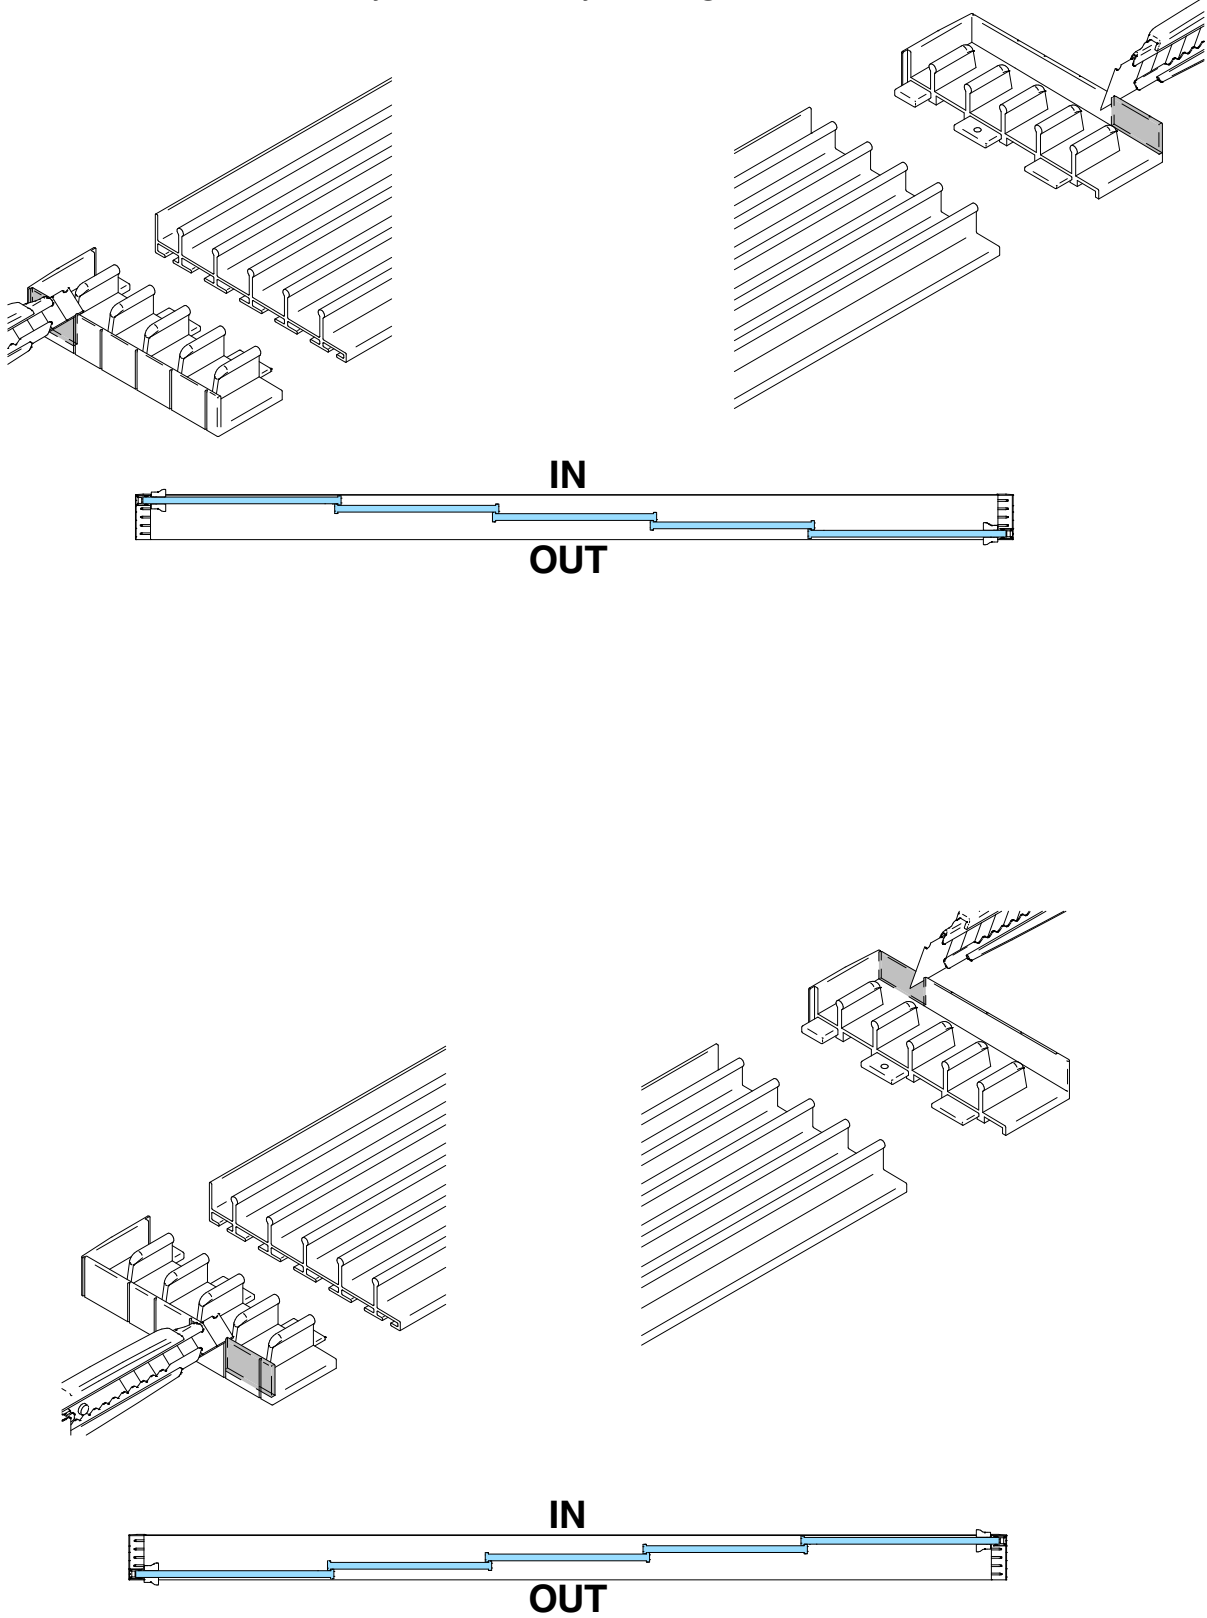



5 Installazione profili Profiles installation - Instalaciòn de los perfi

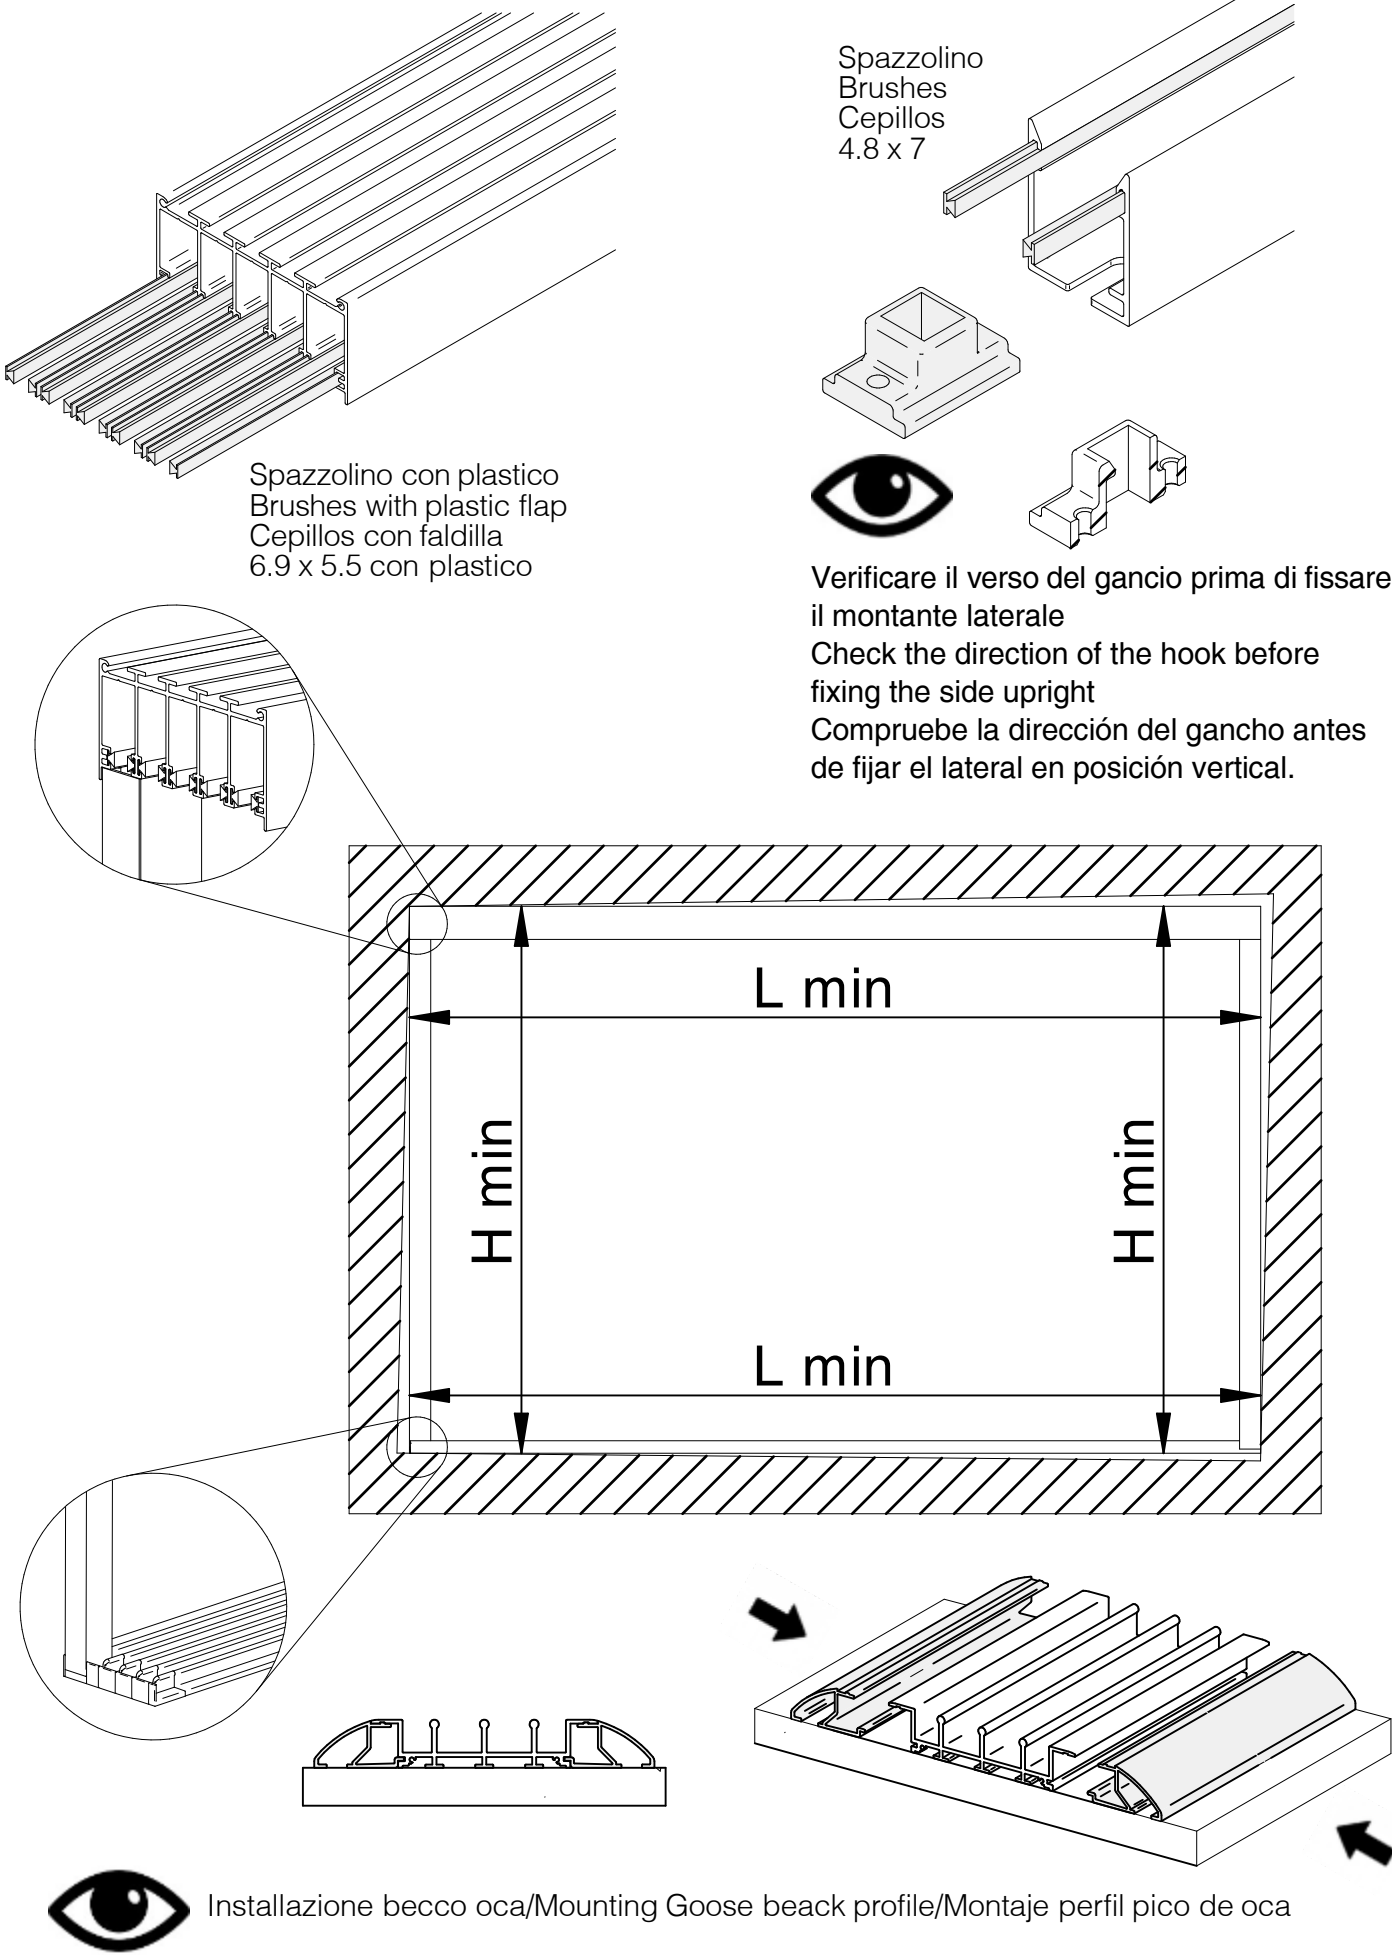



6 Installazione e regolazione ante - Installation and adjustment of the panels Instalación y ajuste de las hojas

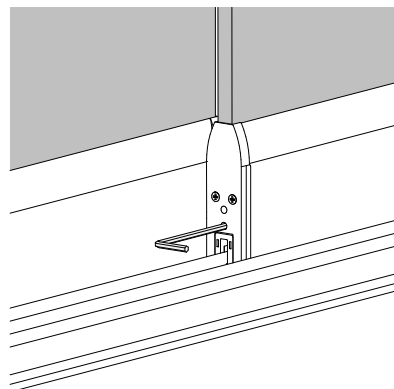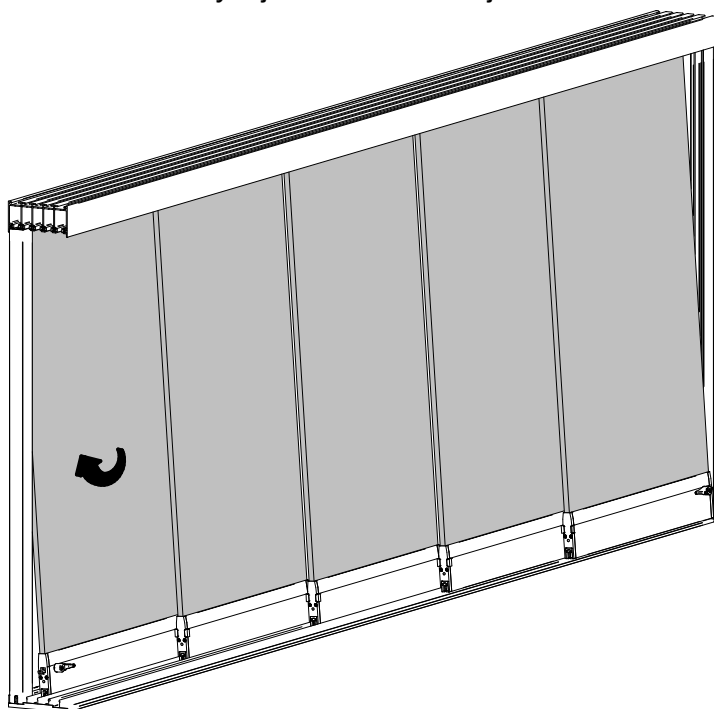

Regolare
Adjust
Regular

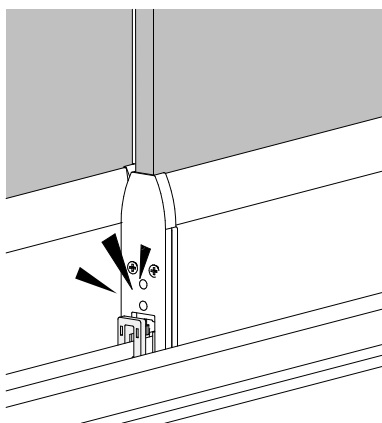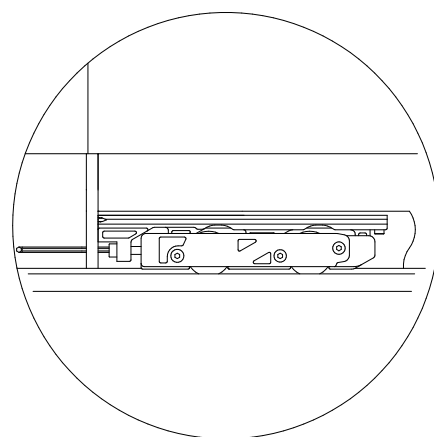

Agganciare l'antiscarrucolamento
Clip the anti-derailment device
Enganchar el sistema de antidescarrilamiento

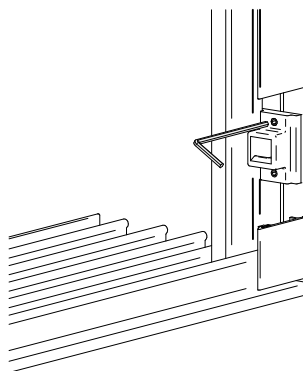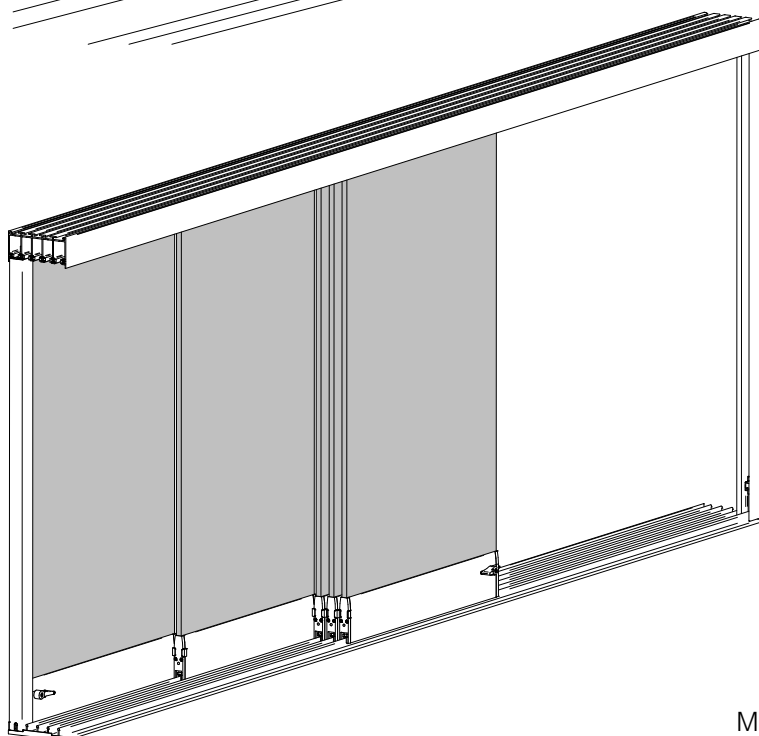

Serrare
Screw
Atornillar



Seguici sui Social Media
Siguenos en redes



McSlide s.r.l. - 📧 [mcslide.it](mailto:info@mcslide.it) - 📧 [mcslide.es](mailto:info@mcslide.es)
McSlide Spain - 📧 [mcslide.es](mailto:info@mcslide.es)